


Above Ceiling Mount for PEAR™ M4936, M6230


Above Ceiling Installation

DESCRIPTION:

Galtronics' above ceiling mount offers an easy installation solution to mount Galtronics' PEAR™ M4936, M6230 antennas above suspended ceilings. Mounting hardware is not included. Make sure the selected fasteners are appropriate based on the ceiling material to which the above ceiling mount is attached to.

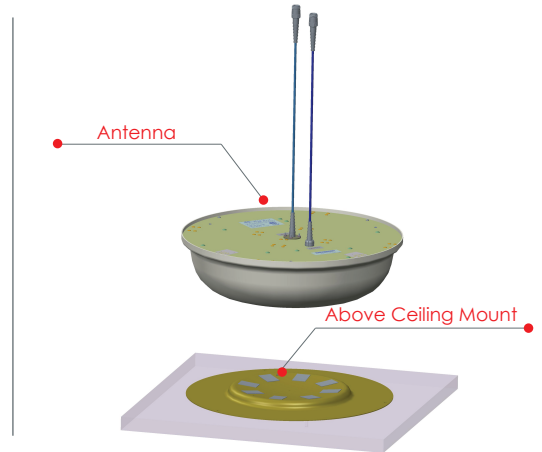


Environmental Conditions	Indoor
Weight	3.15 lbs (1.43 kg)
Diameter	16.00" (406mm)
Height	4.65" (118mm)
Above Ceiling Mount Color	7.00" (170mm)
Above Ceiling Material	13.8" (350mm)
Clearance above ceiling needed	(5.7"/145mm)
Mounting Hardware to ceiling	Not included
Approved for Installation in Plenum Space	Listed & tested by Intertek/ETL
Shipping Dimensions 1 unit (L x W x D)	11.2 x 11.2 x 1.0" (285 x 285 x 25mm)
Shipping Weight 1 unit (Gross Weight)	0.4 lbs (0.18 Kg)

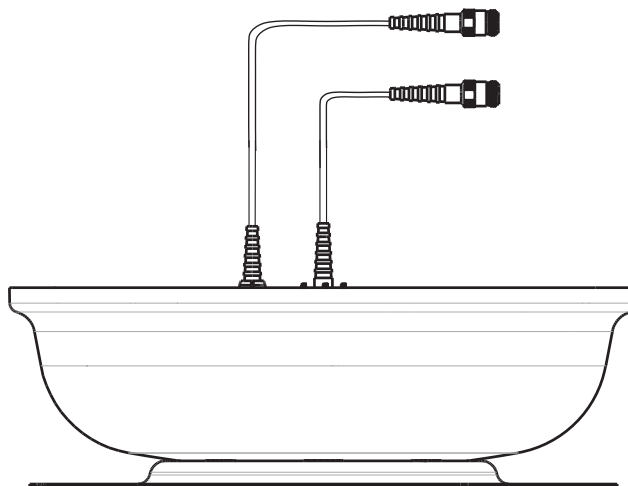

Assembly Instructions for M4936, M6230 Above Ceiling Mount:

A. Attach antenna to the above ceiling mount.

- Remove the protective film from the double sided tape strips located inside the center of the plastic support.
- Set the antenna at the center of the plastic support and press together firmly.

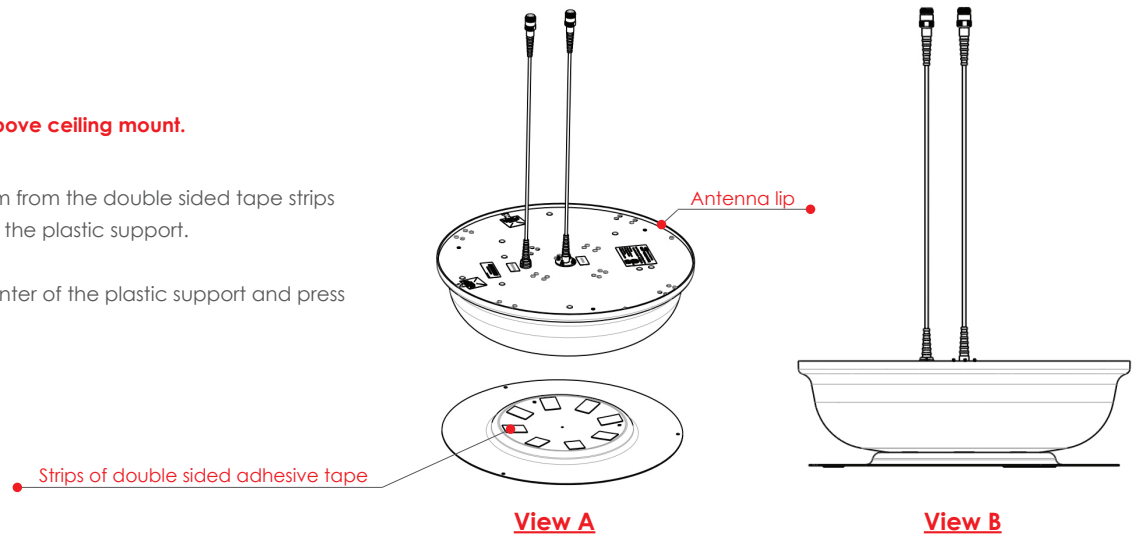

B. Attach antenna assembly to the ceiling.

- Place the above ceiling mount with the antenna above the suspended ceiling and use either option:
- **Option 1:** Remove the protective film on the adhesive strips located at the bottom of the plastic support and firmly press on to the ceiling.
- **Option 2:** Use 3 head screws 3/16" (5mm) diameter suitable for the ceiling material (not provided).

